

How to properly disinfect an ATM machine

The picture shows 2 bottles of cleaner. One bottle is labeled **sdvo** and has a gray label. One is labeled **sd90** and has a yellow label.

Notice the bottle labeled sd90 with the yellow label has no pump sprayer installed. The kit comes with an extra pump sprayer nozzle that needs to be installed into the sd90 bottle.



Step 1: Remove the lid from the sd90 bottle with the yellow label, as shown in the picture.



Step 2: Remove the seal from the sd90 bottle with the yellow label, as shown in the picture.



Step 3: Install the pump sprayer into the sd90 bottle with the yellow label, as shown in the picture.



These are hospital grade cleaning chemicals and certain precautions should always be taken when using them.

Always wear gloves and a mask when using these chemicals and never mix other cleaning chemicals with them.

When applying the cleaner the front of the ATM machine be **CAUTIOUS not** to spray the chemical directly into any electronic device. The main device **NOT** to spray directly will be the **EPP**. Apply a generous amount, **not so much it is dripping from the rag**, and wipe the **EPP** down that way. **Again, DO NOT spray the chemical directly onto the EPP.**

The sdvo, gray label bottle, is used first and then we use the sd90, yellow label second.

STEP1:

PRE-CLEANING INSTRUCTIONS

Remove visible soil by cleaning with damp cloth. Spray sdvo product straight onto soils, scrub and wipe clean with a dry paper towel or cloth. Before spraying the chemical onto the machine it is a good idea to cover the EPP with your rag as shown in the picture.



When spraying the product onto the ATM, hold the bottle about 16- 18 inches from the machine to allow for proper atomization of the spray. Squeeze evenly and firmly as shown in the picture. Wipe down with dry cloth to remove any excess spray.



Once the machine has been cleaned and wiped down we can move to the disinfecting process.

STEP 2:

To disinfect pre-cleaned hard non-porous surfaces:

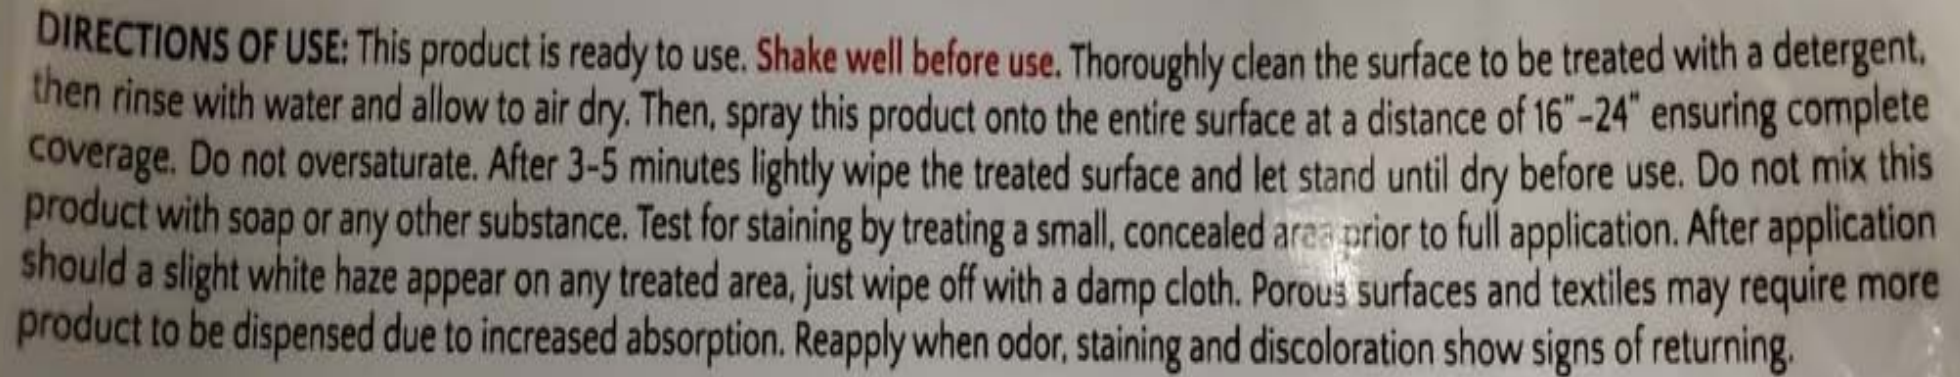
Apply product at full strength, undiluted, to pre-cleaned hard **non-porous** surfaces, wetting thoroughly with spray. Allow surfaces to remain wet for 5 minutes and 10 minutes for virus inactivation and bacterial disinfection. After 5 or 10 minutes elapse wipe down any excess spray with a dry cloth.

DO NOT SPRAY into electronic devices such as the EPP, card reader opening, printer opening as this spray will damage electronic components.

Now we will use the sd90 product with the yellow label, as shown in the picture.



The process of using the sd90 spray is very similar to using the sdvo spray. There are directions on the label on the back of the bottle, as well, as shown in the picture below.

A photograph of a product label with directions of use. The text is printed in black on a light-colored background. The word "DIRECTIONS OF USE:" is in bold. The phrase "Shake well before use." is highlighted in red. The text describes the application process, including cleaning the surface, spraying at a distance of 16"-24", and testing for staining. It also mentions that porous surfaces and textiles may require more product.

DIRECTIONS OF USE: This product is ready to use. **Shake well before use.** Thoroughly clean the surface to be treated with a detergent, then rinse with water and allow to air dry. Then, spray this product onto the entire surface at a distance of 16" -24" ensuring complete coverage. Do not oversaturate. After 3-5 minutes lightly wipe the treated surface and let stand until dry before use. Do not mix this product with soap or any other substance. Test for staining by treating a small, concealed area prior to full application. After application should a slight white haze appear on any treated area, just wipe off with a damp cloth. Porous surfaces and textiles may require more product to be dispensed due to increased absorption. Reapply when odor, staining and discoloration show signs of returning.

Key points: DO NOT mix this product with any other product. Test for staining by treating a small, more concealed area of the machine prior to full application. **Be very careful not to spray directly into any device openings on the fascia as this may cause damage to electronic components. Example: EPP, card reader, audio jack, spr opening.**

Here are some example pictures of how to apply the spray and wipe it off after 3 to 5 minutes.

Notice how the EPP is covered with a rag while spraying.



The entire process should take about 30 to 45 minutes.